

FLOOR CARE MAINTENANCE SYSTEM

Golden Rules of Floorcare

- Communicate and work together.
- Do not burnish a floor unless it has been previously scrubbed.
- Always double-scrub before re-coating.
- Wait 10 minutes after coat is touch dry before applying next coat.



Pronto Floor Stripper

- If in eyes, hold eyes open and flush with water for 15 minutes and see a doctor.
- · If skin contact occurs, wash with soap and water and see a doctor if irritation persists.



View Quick Daily Cleaner

- If in eyes, hold eyes open and flush with water for 15 minutes.
- If skin contact occurs. wash with soap and water.



Revive Cleaner/Maintainer

- · If in eyes, hold eyes open and flush with water for 15 minutes.
- If skin contact occurs, wash with soap and water.



Fortify Floor Sealer

- If in eves, hold eves open and flush with water for 15 minutes.
- If skin contact occurs, wash with soap and water.



Pinnacle UHS Finish

- If in eyes, hold eyes open and flush with water for 15 minutes.
- · If skin contact occurs, wash with soap and water.

See Material Safety Data Sheet for further information.



Mops: Dust mop for cleaning.



Mops: Cotton mop for cleaning, polyester mop or applicator for polishing.



 
Auto Scrubber.



Propane Burnisher.



Pads: Daily Cleaning - Red Stripping – Black Deep Scrubbing - Blue



UHS Burnishing – Check contractor manual for approved pads.

ENANCE

Stripping



1. Dust mop floor.

2. For routine stripping,

mix 1 part Pronto to 4 parts cool water in a mop

mix Pronto at a 1 to 4

dilution. Use proper PPE.

3. Apply liberal amounts of

stripper solution to the floor

with a mop and let soak-in

for 5-10 minutes. Reapply stripper as necessary, do

 
not allow solution to dry on

floor. Scrub edges with

edging tool.




4. Scrub with autoscrubber (squeegee "up" & vac "off") or a slow speed buffer with black pads. Make 2 or 3 passes (slowly) over each section of the floor.



5. Pull stripper from edges and hard to reach areas with hand held squeegee. Apply clean water with autoscrubber and pick up dirty solution with squeegee "down" and vacuum "on". Trail mop behind scrubber with a clean mop.



 6. Check for stripper residues and rinse further if required.



Applying Sealer/Finish

 


1. Dust mop entire floor and remove all dry soil & dust.



3. Mop Method

- Dip mop into bucket Apply first coat to the floor, outline areas to be coated.
- · Fill in with overlapping figure 8 strokes.
- · Allow the coat to dry for 20-40 minutes before applying next coat.



2. Pour sealer/finish into clean dry bucket or applicator container.



4. Applicator Method • Pour 3-6cm wide bead onto floor.

- Spread out using over lapping strokes.
- · Allow the coat to dry for 20-40 minutes before applying further coats.

Cleaning



 
1. Dust mop floor.

2. Scrub floors with an

autoscrubber & RED PADS

using View Quick Cleaner diluted 1 part to 100 parts

of cool water.



For heavy trading stores

- 3. Twice weekly replace View Quick with Revive. • Dilute Revive 1 part to 40
- parts of cool water. Scrub floor with Revive.



with approved burnishing pad.

4. Burnish floor



Re-coat

 


1. Dust mop floors.

2. Deep scrub floors with blue pads using

40 parts cool water.

Reveal diluted 1 part to




scrubber-the first with pads "down" squeegee "up" and vacuum "off" & then the second pass with the "on" to pick up dirty solution.

3. Make two passes with



 squeegee "down" and vacuum Allow cleaning solution to soak for 5 to 10 minutes before second scrub & pick up. 4. Trial-mop behind



5. Apply 2-4 coats of Pinnacle Finish as per applying finish procedure.

scrubber with a

clean rinse mop.



5. Dust mop floor.

