


**CHEMICALS:** CAREFREE SATIN

**EQUIPMENT:**

Personal Protective Equipment (goggles, gloves)	Dust Mop
Tape	Clean Mop Bucket with Wringer
Dust Pan & Broom	Wet Floor Signs
Clean Rayon Mop with handle (wash new mops with neutral detergent and rinse thoroughly)	

**PROCEDURES:**

STEPS	KEY POINTS
<p>1. Assemble equipment</p> <p>2. Remove any free-standing objects from the floor.</p>	<p>1. See above.</p> <p>2. Place "Caution-Wet Floor" signs at the end of each area. Place walk-off mat at exit area.</p>
<p>3. Tape edge if this area meets another tile or carpet area.</p> <p>4. Dust mop entire floor and remove all dry soil &amp; dust.</p>	<p>3. Protect surfaces from contact with floor sealer/finish that could be damaged.</p> <p>4. Work toward ends of aisles, pick up with dust pan and broom.</p>
<p>5. Ensure adequate ventilation is present.</p> <p>6. Pour finish into clean dry bucket reserved of floor sealer/finish.</p>	<p>5. Open windows or mechanically ventilate area.</p> <p>6. Avoid contamination and makes clean up easier.</p>
<p>7. Dip clean rayon mophead into the bucket. Pull out using a light pressure on the wringer.</p>	<p>7. Wring until mop no longer drips. Do not apply excessive pressure as the mop will be too dry.</p>
<p>8. Apply first coat to the floor staying 10-20cm from edges or baseboards.</p>	<p>8. The areas close to edges are low traffic and do not normally require as many coats.</p>

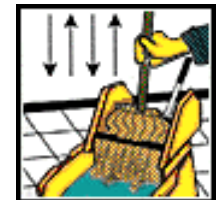


9. Outline the area to be finished. Fill in the outlined area with an overlapping figure-eight mopping pattern.



- 10 Allow the coat to dry before applying further coats.

- 11 Apply further coats of finish following steps 7-10 above. Allow each coat to dry before progressing.

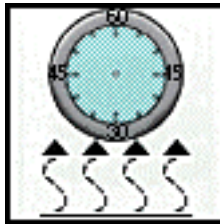


12. Do not return unused sealer to container. Dispose through approved sewer system.

13. Clean all equipment paying particular attention to mophead and bucket. Return to its appropriate area. Remove wet floor signs.



14. Replace all moved furniture when finish is dry.

15. Do not burnish the floor for 24 hours.

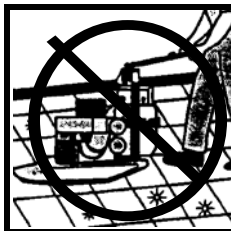

9. When mop starts to drag, rewet. Do not force dry the surface.

- 10 A general guide is: Do not recoat until the finish is dry to touch - plus 15 minutes.

- 11 Take each second coat of finish right the way to the edges. Do not buff between coats.

12. Floor finish contamination can lead to streaking, powdering or other performance issues.

13. Equipment in good clean working order improves the quality of the result.

14. Return of moved items leaves job complete.

15. Finish film can be damaged by early buffing before curing is complete.